


Owner's Manual

RDS-808M6A/B

MICRO-CUT SHREDDER

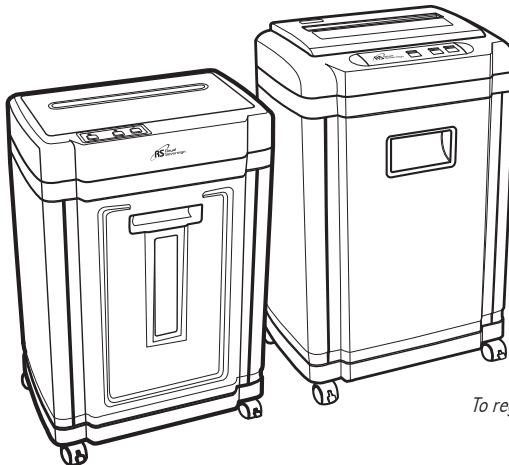

Page en Français 9

*Please read and retain these instructions.
To register your product, please go to www.royalsovereign.com
USA-Customer Support Tab then Registration Tab*

www.royalsovereign.com

SAFETY INSTRUCTIONS

The safety recommendations outlined in this section should be read and understood before operating this machine. When using this machine follow these basic safety precautions to reduce risk of fire, electric shock or injury. Keep this information for future reference.

SAFETY HAZARDS

Safety hazards are depicted in the following images:

*For your safety, please be aware and take notice of all safety hazards.

	240V Power Supply		Misuse of this machine may lead to danger.
	Plug Disconnection: Separate plug from the outlet.		NO DISASSEMBLY: Do not disassemble machinery.

*The following hazards are related to machine placement and movement.

WARNING

		Only operate machine with indicated power supply. Do not alter any distributing wires. This may cause a fire or an electric shock.	
	Do not operate the machine near any flammables or heat-sensitive materials. This may cause a fire or internal damage to the shredder.		
	Avoid placing the machine near the following areas: • a heat or fire-prone area such as a stove or a humidifier • an area with high humidity • an area prone to gas leaks • an area that is exposed to direct sunlight • an area that is dusty or incurs vibrations • an area that is not level or is on an incline This may cause a fire, electric shock, or internal damage to the shredder		
	Do not put any materials on top of the machine.		
	When moving the shredder, turn the machine off and remove the power cord from the outlet. A damaged power cord or plug may cause a fire or electric shock.		
	Do not handle the plug with wet hands. This may cause an electric shock.		Keep the machine out of reach from small children. This may cause serious injury.
	Do not disassemble, repair, or alter the machine. Contact a qualified electrician or the Service department. This may cause a fire or electric shock.		



RDS-808M6A / RDS-808M6B

	Do not place any liquids on the machine. This may cause a fire or electric shock.		Keep aerosol products away.
	Do not damage, alter, or transform the power cord or plug. Do not place any heavy objects on the power cord. Do not pull or bend the cord forcibly. A damaged power cord or plug may cause a fire or electric shock.		
	Do not block the top of the machine. This may cause a fire or a malfunction. Do not use any flammable materials when cleaning the machine. This may cause a fire.		
	Do not operate the machine if the power cord or plug becomes stained by any substance or chemicals. In this case, turn off the machine and unplug the power cord from the outlet. Contact the Service department. Do not disassemble or repair the machine yourself. This can cause a fire or electric shock.		

CAUTION

	Do not have any personal articles hanging around the machine such as long hair, necktie, necklace, and clothing. This may cause bodily injury from the machine.
	Turn off the machine and unplug the power cord from the outlet before cleaning or if the machine will not be in use for a long period of time. This may result in an electric shock.
	- Do not spray water or chemicals into the machine when cleaning. This may result in a fire or electric shock. - Use the machine only for shredding. - If a malfunction or other machine problem occurs, first turn off the machine. Next, contact the Service department. - If you smell or witness smoke coming from your machine, first turn off the machine. Next, unplug the power cord from the outlet, and contact the Service department.
	Keep children's hands away from the paper insert at all times. Do not insert fingers into the shredder.
	Do not insert anything other than paper, staples and credit card into the machine.

Do not allow any foreign materials or substances inside the shredder. This may cause a fire or bodily injury.

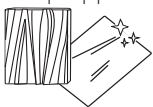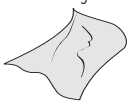Materials except for paper			Flammable and hardening materials
			
Metal, wood, and fabric	Screws and nails	Pencils and ball-point pens	Cellophane and vinyl materials, leaves, flowers, clothes, etc.

CONTENTS

Box Contents	5
Parts.....	5
Features	6
Operation	6
Troubleshooting.....	7
Specifications	7
Warranty.....	8
Página en Francés	9

RDS-808M6A / RDS-808M6B


BOX CONTENTS

Micro-Cut Shredder and Four Casters

PARTS

RDS-808M6A

RDS-808M6B

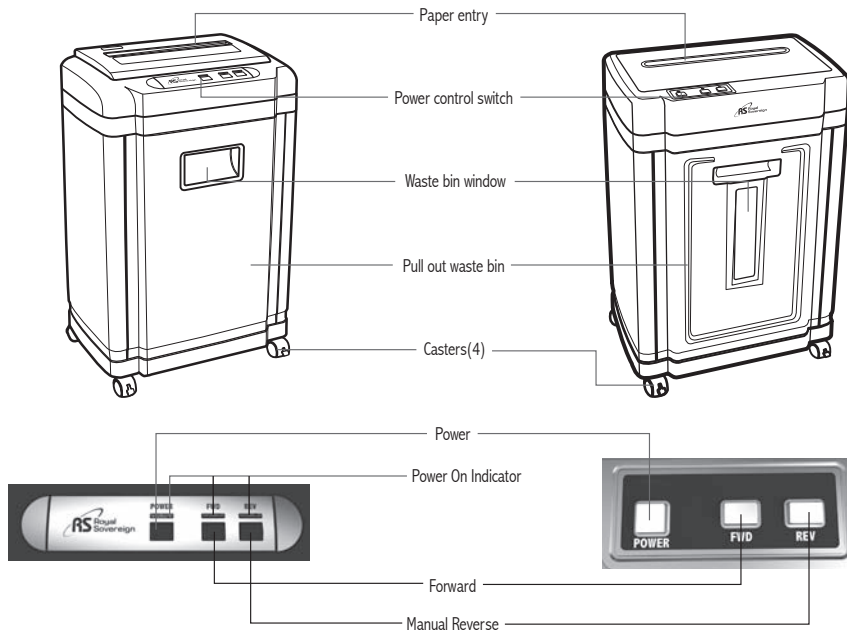

FEATURES

Paper Feed Capacity

The Paper Feed Entry allows users to quickly shred up to 8 sheets at a time. Also shreds credit cards, small paper clips and staples (no CD/DVDs)

Auto Controls

The shredder automatically starts shredding paper upon insertion and will automatically stop when finished.

Safety Features

As a safety precaution, if the pull-out basket is taken out or placed incorrectly the power will automatically cut off.

Pull Out Basket

The shredder comes with a pull out basket to allow easy removal of shreds.

Caster Wheels

The shredder is equipped with caster wheels.

OPERATION

INDICATOR AND SWITCH INSTRUCTIONS

Power Switch

Plug in power cable and turn on the switch located on the top side of the machine.

Power On Indicator

When the shredder is turned on the Power On Indicator will light up. If the basket is pulled out or not in correctly the power will automatically be cut off for safety, and the Power On Indicator will be Off.

Paper Overload (Jam)

If there is an overload of paper the shredder will automatically stop and reverse. The Power On Indicator will be turned on. To resume shredding, pull out the uncut paper from paper entry. Turn the POWER switch to OFF then back to ON. If there is a jam that causes the motor to heat up or if it has been continuously running for more than 10 minutes the motor will cut off. This is to ensure the motor does not overheat. When the shredder cools down more than 30 minutes you can begin shredding again.

FORWARD/REVERSE Setting

Turn the POWER switch On and press FORWARD/REVERSE button for 1 second for manual forwarding/reversing paper from entry. If the Power On Indicator is Off, plug in power cable and turn on the POWER switch located on the top of the machine.

TROUBLESHOOTING

Symptom	Solutions
Inserted paper, but the machine is not shredding.	Check if unit is plugged in. Check the power switch is turned on. Check if there is jammed paper. If paper is jammed, turn the control switch to REVERSE to retrieve jammed paper.
Finished shredding, but motor continues to run.	Internal sensor may be covered by dust or small pieces of paper. Turn the control switch to REVERSE to try and move the pieces of paper.
The machine is plugged in, but the Power On Indicator is not on.	Check to make sure that the Pull-out Bin is pushed in correctly. Check the power switch is turned on.
The machine is plugged in, the Power light indicator is On, but the shredder is not running.	Too much paper was inserted into the entry at once or the motor is getting hot from over 10 minutes of continuous use. You will have to wait till the shredder cools down (approximately 30 minutes).

Note: Extensive use of paper clips or other hard materials will result in damages to the cutting system and will void the manufacturer's warranty.

If you are still having complications, please contact Royal Sovereign's service department.

SPECIFICATIONS

Model	RDS-808M6A / RDS-808M6B
Entry width	220mm
Shred Size	3mm x 9mm
Unit Dimensions (w x d x h)	360mm x 260mm x 550mm
Power Supply	240V 50Hz
Power Consumption	190W
Pull-out Basket Volume	21L
Unit Weight	7.85 Kg
Manual Feed Capacity	8 sheets (letter / A4 / 75g/m ² paper), 1 credit card
Speed	1.8 m/min
Continuous Run Time	10min on / 30min off
Noise(dB)	58 (dB)

LIMITED ONE YEAR WARRANTY

This warranty applies to repair or replacement of product found to be defective in material or workmanship for one year from the date of the original purchase. This warranty is extended only to the original purchaser.

This warranty does not apply to damage resulting from abuse, misuse, improper maintenance or damage that is attributable to acts of nature. Royal Sovereign International, Inc. (and its affiliated companies) is not liable for incidental or consequential damages of any nature. This limitation would not apply if you live in those areas that do not permit the exclusion or limitation of incidental or consequential damages.

Defective products for warranty repair or replacement cannot be returned without a Return Authorization number. Please go to www.royalsovereign.com USA-Customer Support Tab to make a request for an Office Product Return Authorization.

Defective products must be returned to Royal Sovereign International Consumer Return Department, freight prepaid, with proof of purchase and Return Shipping and Handling payment (check or money order). Upon repair or replacement the product will be returned to the customer.

Return defective product to the following address with a detailed description of the problem. If possible, pack in original carton. Please prepay shipping charges.

For out of warranty service or frequently asked questions please go to www.royalsovereign.com USA- Customer Support Tab.

For sales of product, parts or accessories please visit us at www.royalfulfillmentcorp.com.

For service or sales please contact your local Royal Sovereign Office:

ROYAL SOVEREIGN INTERNATIONAL, INC.

2 Volvo Drive Rockleigh, NJ 07647 USA

TEL : +1) 800-397-1025 FAX : +1) 201-750-1022

RS INTERNATIONAL AUSTRALIA PTY. LTD.

30 Prime Drive, Seven Hills, NSW 2147, AUSTRALIA

TEL : +61) 2-9674-2127 FAX : +61) 2-9674-2027

RS CANADA INC.

1025 Westport Crescent, Mississauga On L5T 1E8 CANADA

TEL: +1) 905-461-1095 FAX: +1) 905-461-1096

TF: +1) 866 961-6673

RS HOLLAND B.V.

Industrieweg 6K, 4104AR, Culemborg, The Netherlands

Tel: +31 (0)345 473 097 Fax: 31 (0)345 519 811

www.royalsovereign.com